


# DESA™

INDOOR/OUTDOOR PRODUCTS

## PROPANE CONSTRUCTION FORCED AIR HEATER OWNER'S MANUAL

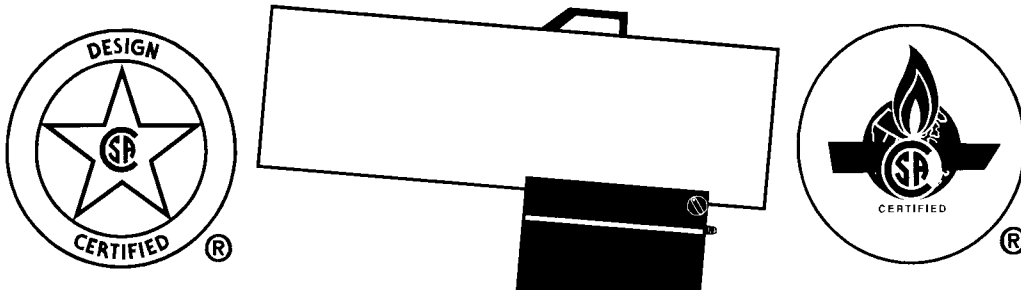

**VARIABLE 30-55,000, 50-85,000 AND 75-125,000 BTU/HR**

**IMPORTANT:** Read and understand this manual before assembling, starting or servicing heater. Improper use of heater can cause serious injury. Keep this manual for future reference.

**⚠ GENERAL HAZARD WARNING:**

Failure to comply with the precautions and instructions provided with this heater, can result in death, serious bodily injury and property loss or damage from hazards of fire, explosion, burn, asphyxiation, carbon monoxide poisoning and/or electrical shock.

Only persons who can understand and follow the instructions should use or service this heater.

If you need assistance or heater information such as an instructions manual, labels, etc. Contact the manufacturer.

**INSTALLER:** Leave this manual with the appliance.  
**CONSUMER:** Retain this manual for future reference.

### TABLE OF CONTENTS

Safety Information .....	2	Maintenance .....	6
Product Identification .....	3	Troubleshooting .....	7
Unpacking .....	3	Service Procedures .....	8
Theory of Operation .....	4	Specifications .....	10
Propane Supply .....	4	Wiring Diagram .....	10
Installation .....	4	Replacement Parts .....	11
Ventilation .....	5	Technical Service .....	11
Operation .....	5	Illustrated Parts Breakdown and Parts List .....	12
Storage .....	6	Warranty and Repair Service .....	18

